


**IMPORTANT: CLEAN THE BASKET ASSEMBLY THOROUGHLY BEFORE CHANGING DISC AND
HANDLE WITH CARE**

| STEP | DESCRIPTION | PHOTO |
|------|--|--|
| 1 | A 13mm socket wrench is required to change the disc. This tool is readily available at any hardware store and most Maintenance staff has this tool. |  |
| 2 | Place the basket assembly upside down on a flat surface. You will see the clutch drive with a nut and washer attached. |  |
| 3 | <p>Use the tubular box wrench to loosen the nut. After removing, you will have a total of six (6) pieces:</p> <ol style="list-style-type: none"> 1. Basket 2. Base 3. Grating Disc with Screw 4. Clutch Drive 5. Washer 6. Nut <p>Note: In newer models the plate is attached to the basket.</p> |    |

| | | |
|----------|--|--|
| <p>4</p> | <p>Make note of one side of the center screw that is flat. This must align with the flat side of the hole in the a) the basket; b) the base; and c) the grating disc</p> |  |
| <p>5</p> | <p>Take the replacement grating disc and place it in the base of the basket, aligning the flat side of the hole. Insert the special screw.</p> |  |
| <p>6</p> | <p>Assemble the flat side of the base against the bottom of the basket assembly (outer edge turned down).</p> <p>Holding the nut in the upside down basket with one hand, replace the clutch drive, washer and nut.</p> <p>Tighten the nut with the socket wrench.</p> |  |

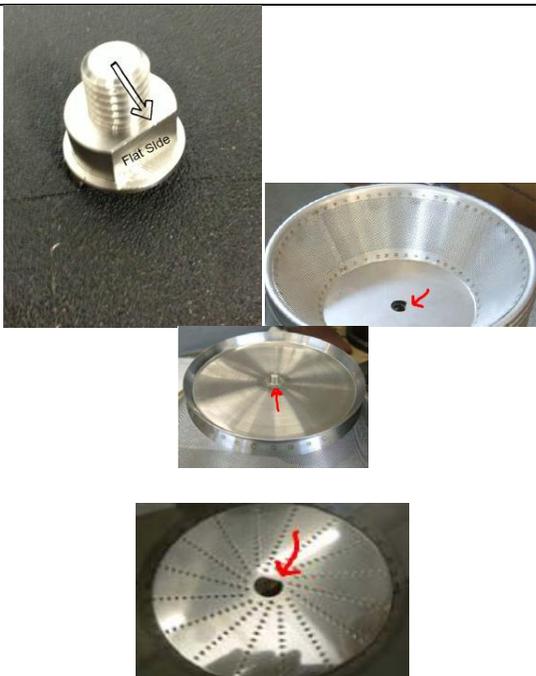