

## UNCRATING DIRECTIONS

**NOTE: Before uncrating, remove plastic cover, walk around container and inspect for damage.**

1. Using a standard Phillips screwdriver (P2):
2. Remove the four (4) screws in front on the top half of crate.



3. Remove screws from side latches and pull down bottom half of crate.



4. Remove the two (2) screws from top and bottom of each side brace to pullout top portion of crate.



5. Pullout the round wooden dowel to unlock the brakes from the front wheels.

6. Pull up latch of each brake.

7. Pull machine forward until bottom lock on side of machine is visible.

8. Take out key from bucket and unlock (clockwise) the top and bottom locks located on left hand side of machine.

9. Remove top and bottom wooden braces from crate.

10. Remove waste container.



11. Close door and lock by turning key counter-clockwise.

12. Slide and tilt machine to remove from crate.  
**BE EXTREMELY CAREFUL AS IT IS VERY TOP-HEAVY.**

